




# Durastill 3020 Automatic Fill Water Distiller

Durastill 3020 Water Distiller

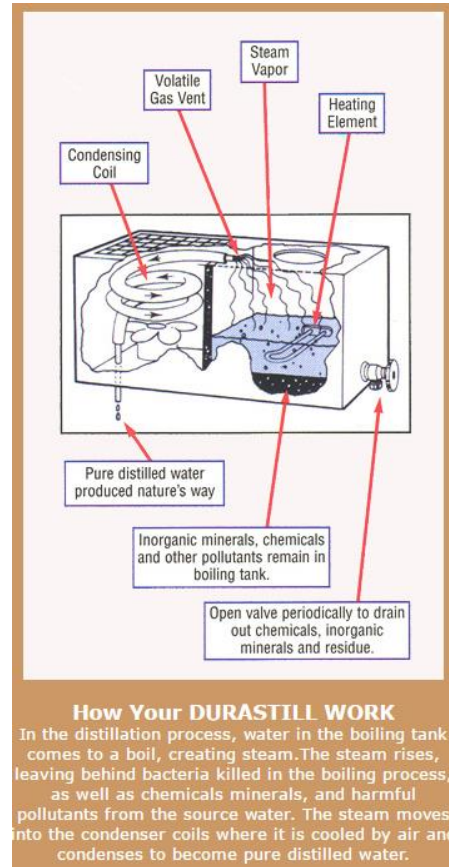

- 8 Gallons per day distilling capacity
- Convenient Faucet with Water Site Gauge
- Automatic Fill- 5 Gallon Stainless Steel Storage Tank
- Volatile Gas Vent System (air ventilation without water waste)
- Incoloy (stainless steel super alloy) heating element - 1100 watt
- Self-Sterilization Feature. With empty reserve tank, simply flip fan switch off for a couple minutes when steaming
- Plugs into any regular 110 to 120 volt outlet.
- 316 Alloy Stainless Steel Evaporator
- Fill manually. No water connection required.
- Automatically turns off when boiler requires filling

**FAX** : 613-524-3248

**E-MAIL** : [duracana@bellnet.ca](mailto:duracana@bellnet.ca)

or

**WRITE US** : DURASTILL CANADA

**TELEPHONE** : 613-524-2177

**Exclusive Distributors**

4582B Ste Catherine Street

St Isidore, Ontario Canada K0C 2B0



- Stainless steel post charcoal filter: After the steam is condensed by fan cooling, the distilled water produced then passes through a granulated coconut charcoal filter. This aerates the water, giving it a "fresh" taste and traps any volatile gases that may have escaped in the distilling process. Precision distillers have a refillable stainless steel filter canister between the distiller and the holding tank. (Sediment Pre-filter and post-filter included)
- Optional automatic draining system included.
- Distilled water quality type 1 and 2 (conductivity <= 250)
- Made in the U.S.A

**Stainless steel – made in the U.S.A.**

Height 13 inches

Width 20 inches

Depth 13 inches

Shipping Weight 36 lbs.

Produces 30 liters (approximately 8 gallons) every 24 hours.

**Storage Tank**

Holds 20 liters

Width 20 inches

Depth 13 inches

**Notes:**

The manual storage tank does not have the float and switch to automatically turn the distiller off when the storage tank is full. In order to prevent the storage tank from overflowing, the water level gauge should be checked before beginning each cycle.

Manual distillers require refilling by hand after each 1.5 gallons or so has been distilled. For this reason it is highly recommended to get an automatic unit as long as there is a convenient water supply available. All Durastill distillers have float switches that automatically turn off the distiller when the boiler gets low. So it is okay to leave the system unattended while it is running. However, it is important to monitor the reservoir or holding tank when it gets to be 1.5 gallons from full in order to avoid spill-over.

(Optional automatic reservoir tanks are available which will turn the distiller off when the tank is full. See Durastill Water Distiller Parts and Accessories category at left.)

<b>FAX</b>	<b>:</b>	<b>613-524-3248</b>	<b>TELEPHONE</b>	<b>:</b>	<b>613-524-2177</b>
<b>E-MAIL</b>	<b>:</b>	<a href="mailto:duracana@bellnet.ca">duracana@bellnet.ca</a>	<b>Exclusive Distributors</b>		
<b>or</b>					
<b>WRITE US</b>	<b>:</b>	<b>DURASTILL CANADA</b>	<b>4582B Ste Catherine Street</b>		
			<b>St Isidore, Ontario Canada K0C 2B0</b>		



Reserve tank does not have an additional outlet for a demand pump hookup. If a demand pump is desired, please consider a 10 gallon storage tank. However, the reserve tank can be made to accept a demand pump line by replacing the spout with an appropriate fitting to accept the water line.

**FAX** : 613-524-3248

**E-MAIL** : [duracana@bellnet.ca](mailto:duracana@bellnet.ca)

or

**WRITE US** : **DURASTILL CANADA**

**TELEPHONE** : 613-524-2177

**Exclusive Distributors**  
4582B Ste Catherine Street

St Isidore, Ontario Canada K0C 2B0